

QUICK START/ INSTALLATION GUIDE

Before You Begin

Make sure you have the following:

- An active Internet connection with Ethernet connection RJ-45(Cable/DSL Modem or Router)
- An analog telephone or fax machine with an RJ-11 phone cable

IMPORTANT: If you plan to use your existing home phone wiring and phone jacks then you must disconnect and isolate the lines from the phone company. Because you are dealing with lines that carry VOLTAGE, there's always a risk of causing fire or damage to your phone lines and equipment. If you are not comfortable doing the work yourself, you should hire a professional electrician or telephone technician to do the job instead.

- Reztel will not be held responsible for any changes you make to your home wiring.

Connect the Phone Adapter

A Power off your network devices, including your cable/DSL modem, router and PC.

B Connect one end of an RJ-11 phone cable to the Phone Adapter's PHONE 1 port. Connect the other end to your analog telephone or fax machine.

IMPORTANT: Do not connect the PHONE port on the Phone Adapter to a telephone wall jack. Make sure you only connect a telephone or fax machine to the PHONE port. Otherwise, the Phone Adapter or the telephone wiring in your home/office may be damaged.

C If you have purchased a second phone and/or fax line then Repeat Step B with the PHONE 2 port using your secondary phone and/or fax machine.

D Connect one end of the Ethernet network cable(included) to the ETHERNET port of the Phone Adapter. Connect the other end to the Ethernet port on your PC or routers WAN port.

E Connect one end of your Ethernet network cable(Internet Service) to the INTERNET port of the Phone Adapter. Connect the other end to your cable/DSL modem and/or router's WAN port.


F Power on the cable/DSL modem and/or router.

G Connect the included power adapter to the Phone Adapter's power port and then plug the power adapter into an electrical outlet. The power LED on the front panel will light up as soon as the Phone Adapter powers on.

H Power on your PC. Your phone should now have a dial tone.

BASIC INSTALLATION

INTERNET SERVICE

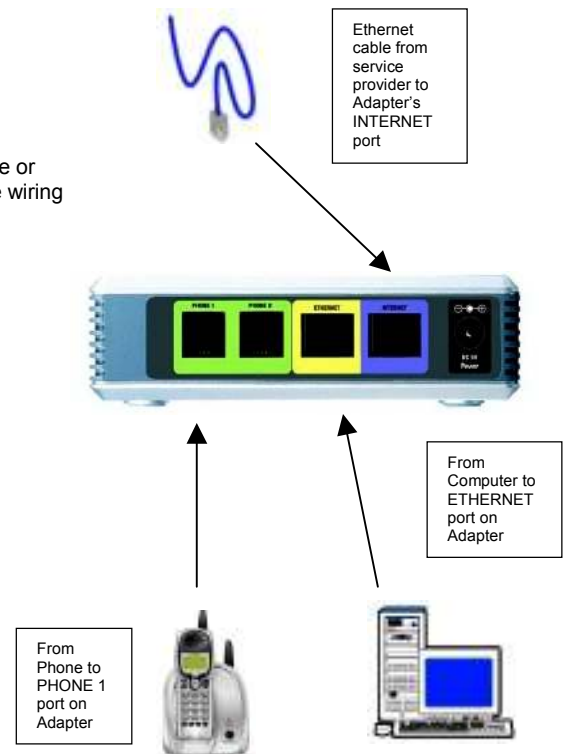

HOW TO CONNECT WITH A ROUTER

INTERNET SERVICE

